 
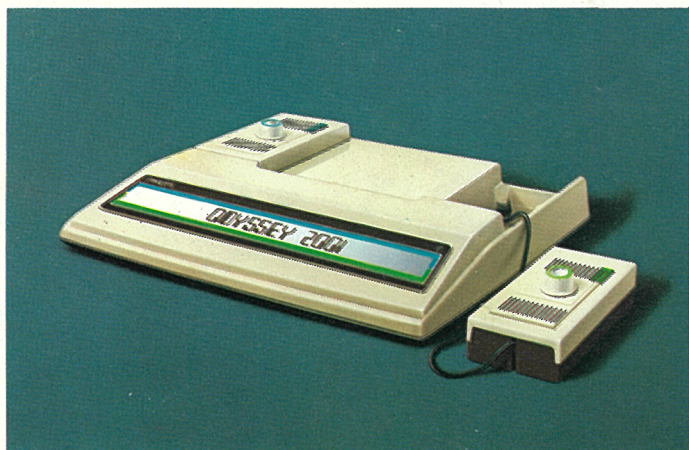 


ODYSSEY 2001[®]

Sports field thrills on your TV screen

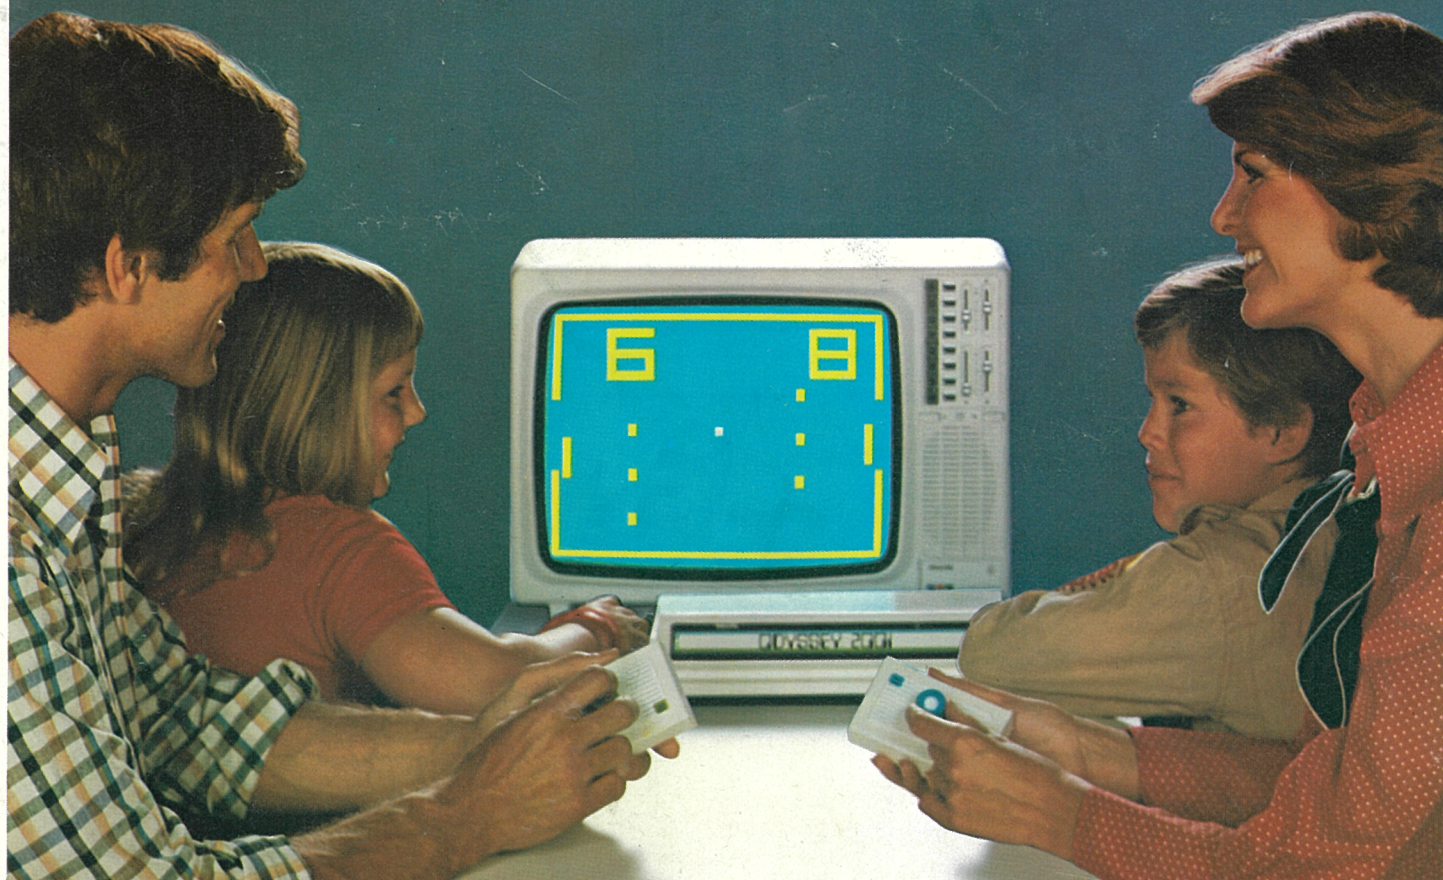

Instructions for use

ODYSSEY 2001

Having acquired an Odyssey 2001, you are now the possessor of one of the most exciting indoor games invented in the last few years. A game that brings the excitement of the sports field into your living-room. Use it to test your speed of reaction and that of your opponents!

How to connect it


The Odyssey can be connected to any TV set with an aerial socket into which the aerial plug of the Odyssey 2001 fits (if it doesn't, have a word with your dealer who will give you or fit a plug that does). The game itself is powered from the mains.

In action

Once you've made the aerial connection, you can switch on your TV set. Select VHF channel 3 (the Odyssey can also be set for VHF 4 - ask your dealer about this). Now switch on the Odyssey 2001, turn the fine tuning control of your TV set until you get a picture, then adjust the brightness and contrast.

PHILIPS



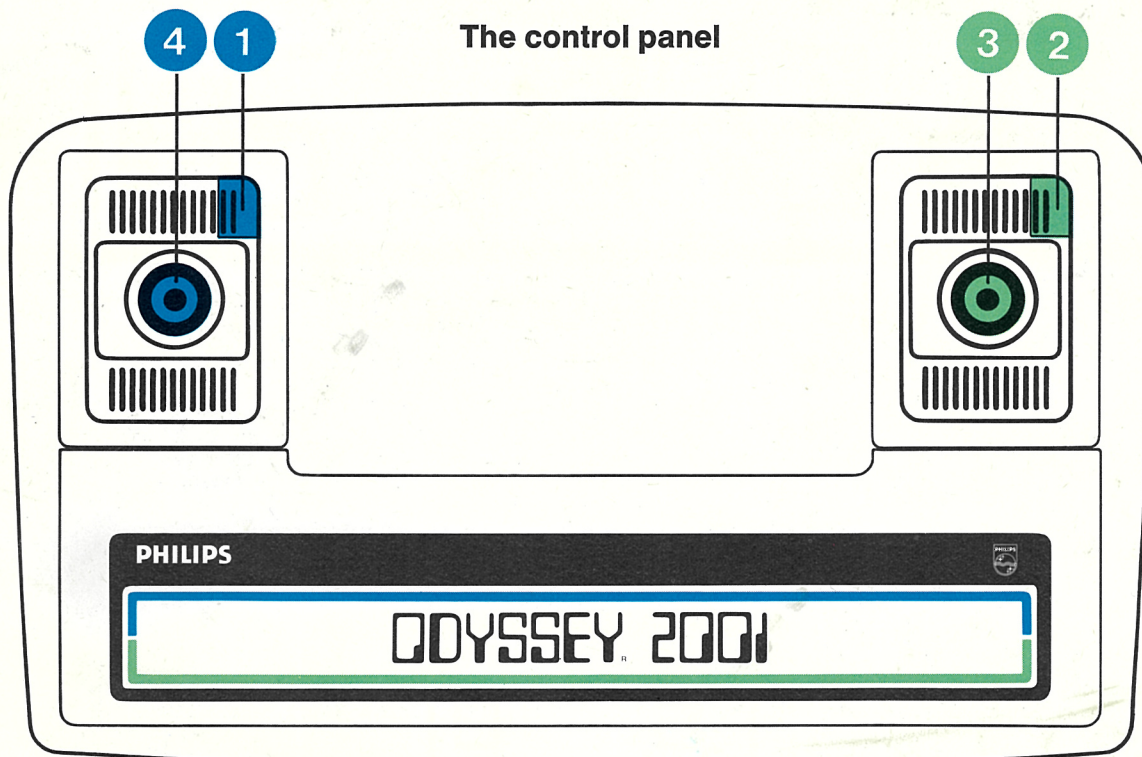

- ① Game selector button
- ② Resetting knob, also player "reduction" knob
- ③ "Green" player control knob
- ④ "Blue" player control + opponent switch-off knob (for playing by yourself).

Three games can be played: ICE HOCKEY, TENNIS and SQUASH


To get the most out of your Odyssey 2001 a number of rules (the same for all the games) have to be observed:

- The type of game played is selected with button 1; pressing this button brings you on to the next type of game.
- A game ends when one of the players has scored 15 points/goals.
- The score is then reset to 0-0 by pushing button 2.
- The resetting knob 2 is also used to "reduce" a player (e.g. if one player is much better than the other, or to make the game more exciting). To do this, turn up to maximum the player to be handicapped and then press the resetting knob. The score automatically returns to 0-0.
- When the ball has been returned 4 times by a player without any scoring, the speed of the game is automatically increased. After a score the Odyssey 2001 goes back automatically to its starting speed.
- The sound produced when players strike the ball can be adjusted with the volume control on the


TV set.

- If you want to play alone, turn the blue knob counter-clockwise as far as it will go. This switches the "blue" player off but the game selector switch remains operative and you play using just the green knob.
- The ball is automatically served from wherever the player is and the ball comes from the player.
- Time-out: the player serving decides when the ball comes into play; as long as the player knob is turned up fully, no service will be made.


HOCKEY

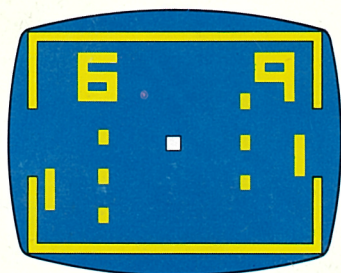

TENNIS

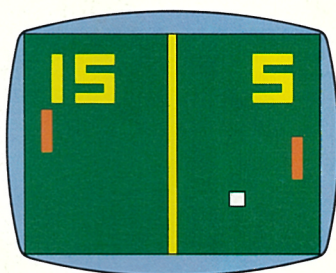

SQUASH

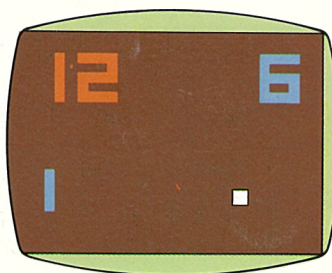

Only one player is visible at any given moment and he changes colour to indicate whose turn it is to play the ball.